



Insignia NS-B4111 Antenna Replacement

Replace a broken antenna to get the radio to work again.

Written By: Kristin Yoshioka



INTRODUCTION

This guide shows you how to remove the antenna from the boombox.



TOOLS:

- [26 Bit Driver Kit](#) (1)
-

Step 1 — Battery



- Unplug and remove the power cord. Turn the boombox upside down.
- Grip the sides of the case and use your thumbs to pop open the battery cover.

Step 2




- Pry out the batteries with your fingers.

Step 3 — External Antenna




- Set the boombox upright. Remove the 4mm screw and the two 6mm washers with the Phillips PH1 screwdriver.
- Remove the external antenna.

Step 4 — Casing

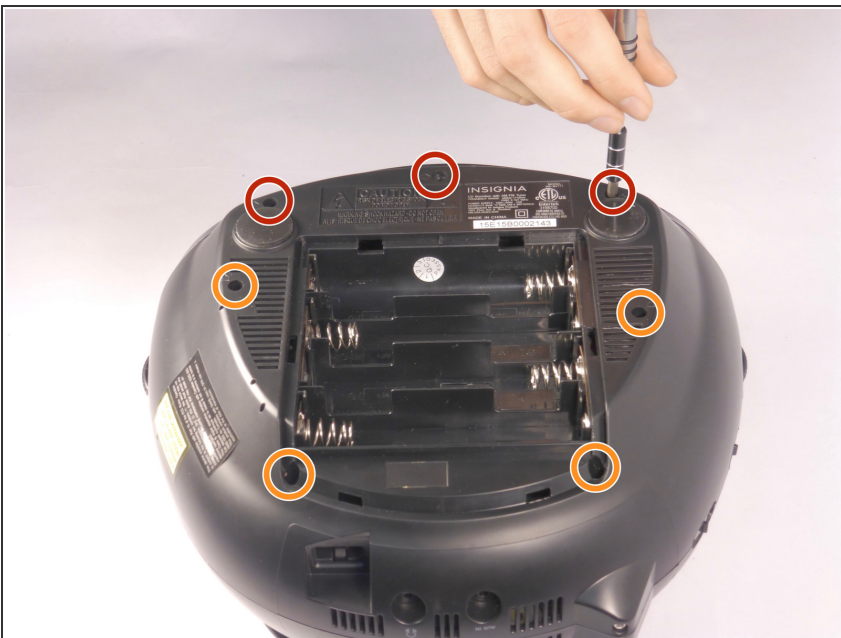



- Turn the boombox upside down again. With the Phillips PH1 or the Flathead #3 screwdriver, remove the three 14mm black screws.
- Remove the four 18mm chrome screws with the Phillips PH1 screwdriver.

Step 5

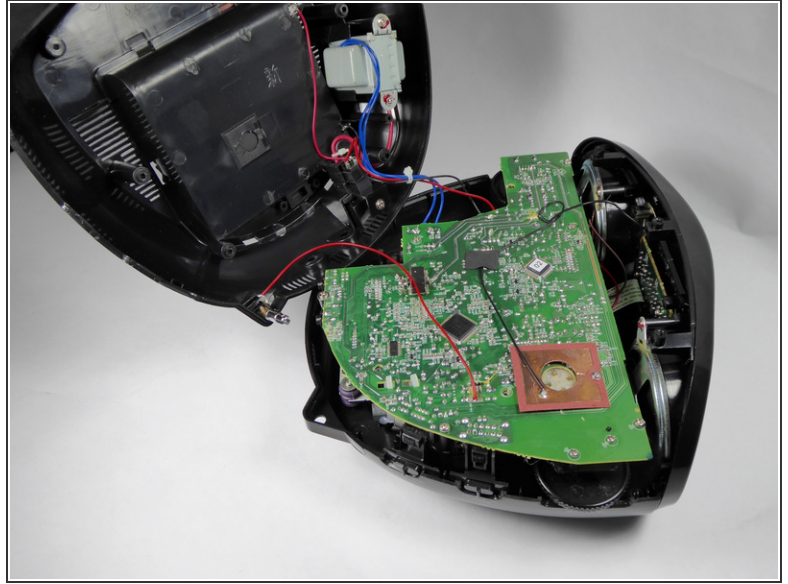

- Gently remove the bottom half of the casing from the top half of the casing.
- ⓘ The antenna base is connected to the motherboard by a red wire. This wire will prevent the two halves from separating completely.

Step 6 — Antenna Base

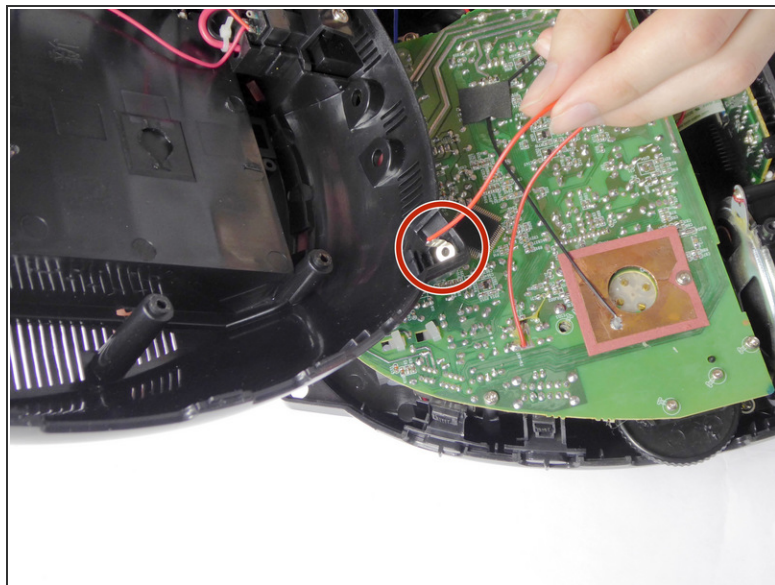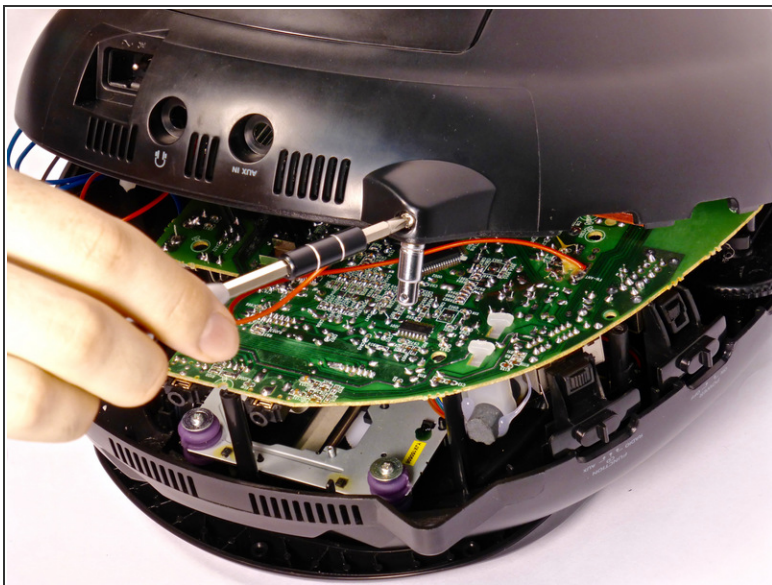

- Remove the 10mm chrome screw from the antenna base with the Phillips PH1 screwdriver. Remove the antenna base from the casing.
- This red wire will now be loose and you can move it out of the antenna base slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 03:01:48 AM.